



# Fuse and Relay Information


Battery Junction Box (BJB), top

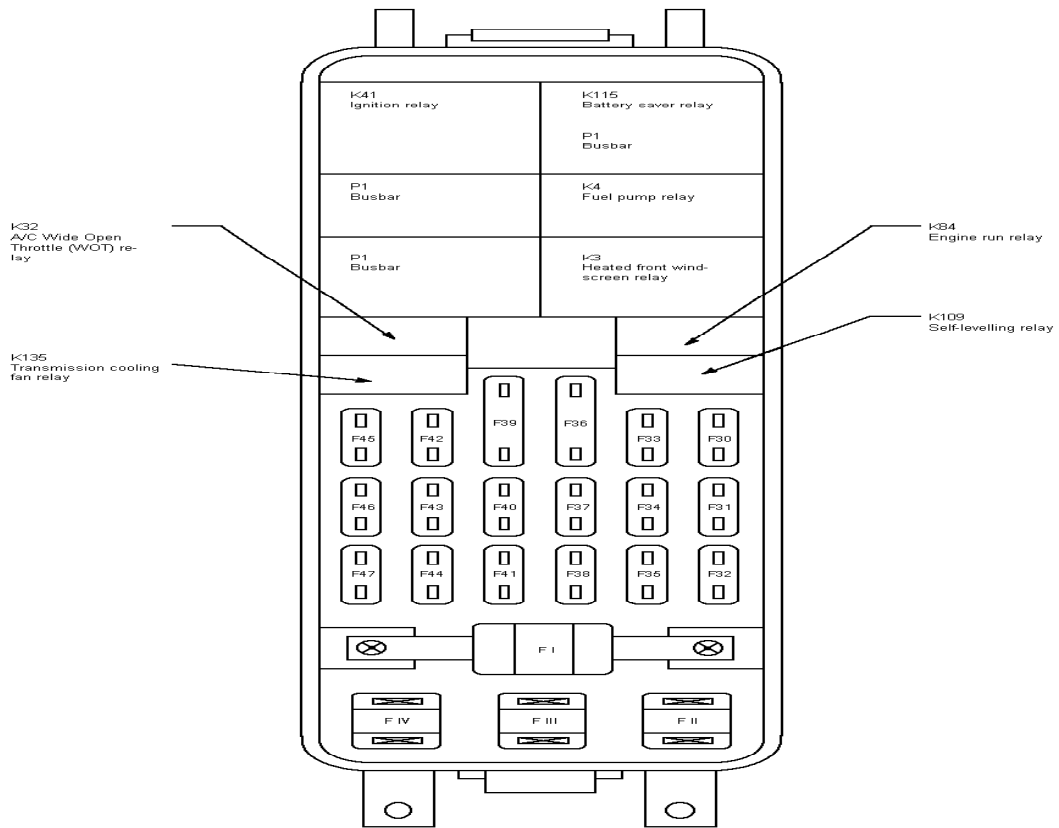


Battery Junction Box (BJB), bottom

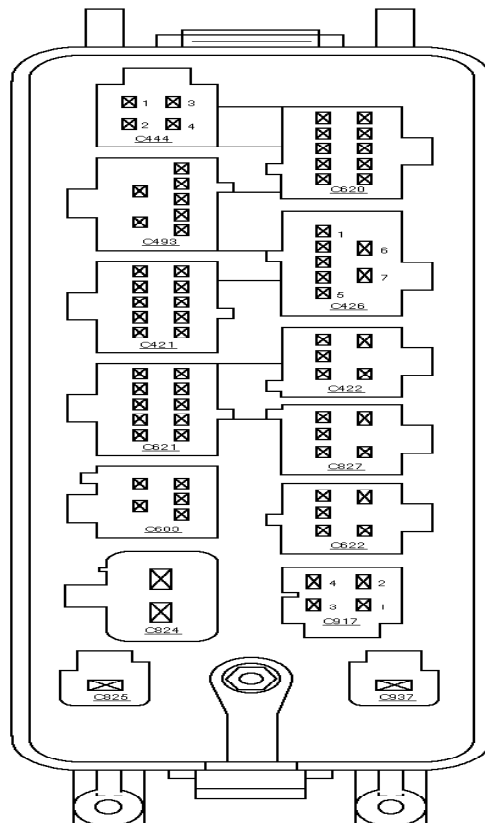

Central Junction Box (CJB), front

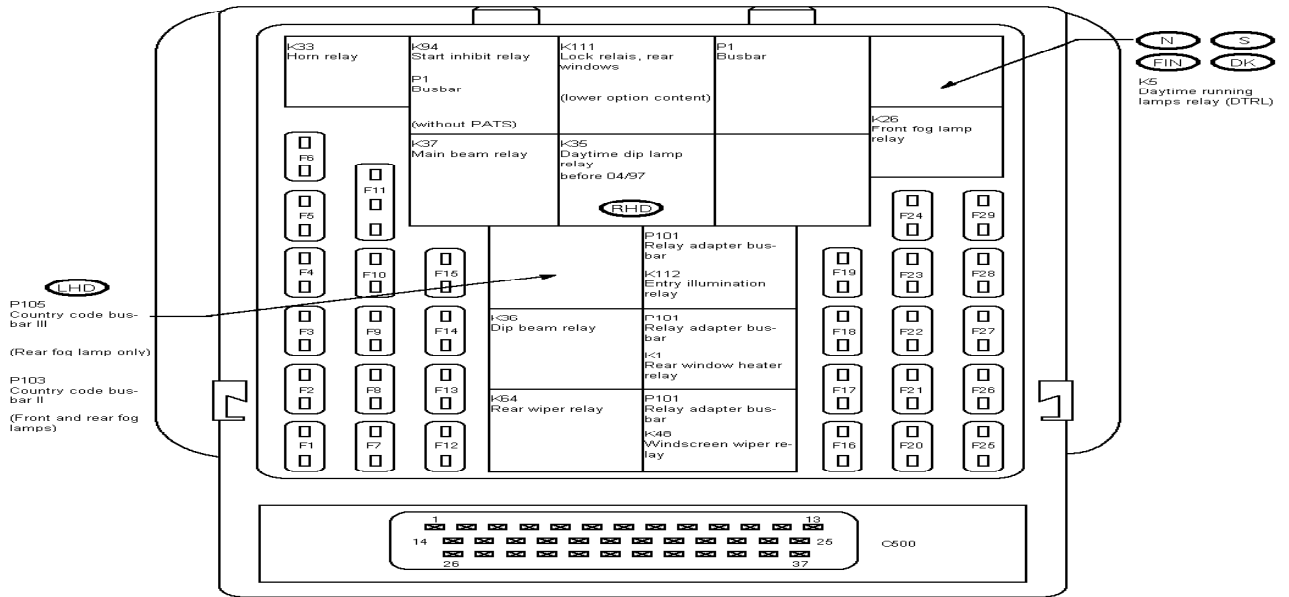

Central Junction Box (CJB), rear

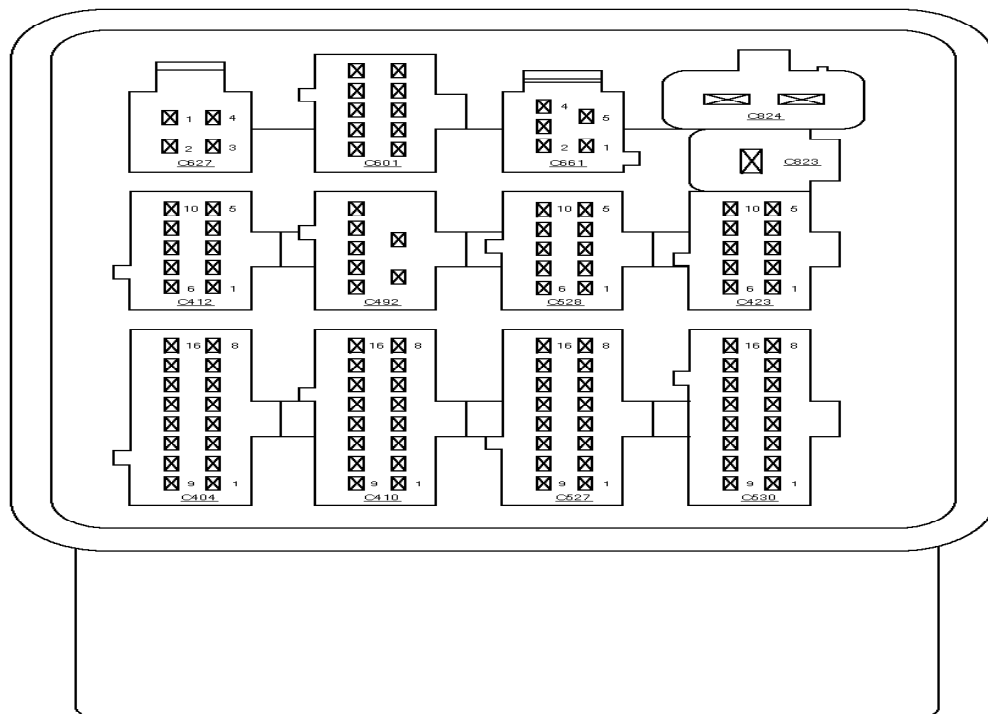



Central Junction Box (CJB)

		Fuse number																	
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
		15A	5A	10A	10A	10A	30A	25A	5A	15A	10A	10A	5A	20A	15A	7.5A	7.5A	7.5A	10A
33-03	Instrument Illumination			●													●		
33-04	Instrument Cluster																●	●	
33-05	Central Timer Module																		
33-06	Vehicle Speed Sensor																		
33-07	Speed Control														●	●	●		
33-08	Anti-theft Alarm								●								●	●	
33-09	Passive Anti-theft System (PATS)																		
33-10	Cigar Lighter/Clock																●	●	
33-11	De-icing																		
33-12	Taxi Equipment									●					●				
33-13	Park Position System														●				
34-01	Heating/Ventilation																		
34-02	Air Conditioning																●		
34-03	Air Conditioning (03/96 ->)																●		
34-04	Air Conditioning with SATC								●								●	●	
34-05	Air Conditioning with SATC (03/96 ->)								●								●	●	
38-01	Radio/Cassette			●					●								●	●	
38-02	Premium Sound CD/Amplifier								●								●		
40-01	Heated Seats								●										
40-02	Power Seats						●												
40-03	Power Seats with Memory						●									●			
40-04	Air Bags																●		
41-01	Central Door Locking								●								●		
41-02	Power Sunroof																●		
42-01	Power Windows																●		
42-02	Power Windows (02/95 @->)																●		
43-01	Power Mirrors																		
43-02	Power Mirrors with Module																		
43-03	Electro-Chromic Mirror															●	●		
43-04	Power Global Closing																●		
43-05	Trailer Adapter Socket															●			
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
		15A	5A	10A	10A	10A	30A	25A	5A	15A	10A	10A	5A	20A	15A	7.5A	7.5A	7.5A	10A

Central Junction Box (CJB)

		Fuse number																		
		19	20	21	22	23	24	25	26	27	28	29	30							
		20A	20A	10A	20A	5A	10A	30A	30A	10A	30A	30A	20A							
					●			●	●			●								33-03
					●															33-04
																				33-05
																				33-06
					●			●	●											33-07
																				33-08
																				33-09
		●	●																	33-10
																				33-11
																				33-12
												●								33-13
												●								34-01
												●								34-02
												●								34-03
												●								34-04
												●								34-05
					●	●														38-01
					●	●														38-02
																				40-01
																				40-02
																				40-03
																				40-04
					●															41-01
																				41-02
																				42-01
																				42-02
					●															43-01
																				43-02
																				43-03
																				43-04
																				43-05
		19	20	21	22	23	24	25	26	27	28	29	30							
		20A	20A	10A	20A	5A	10A	30A	30A	10A	30A	30A	20A							



