




29-02-002 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission) , Ignition as of 03/96

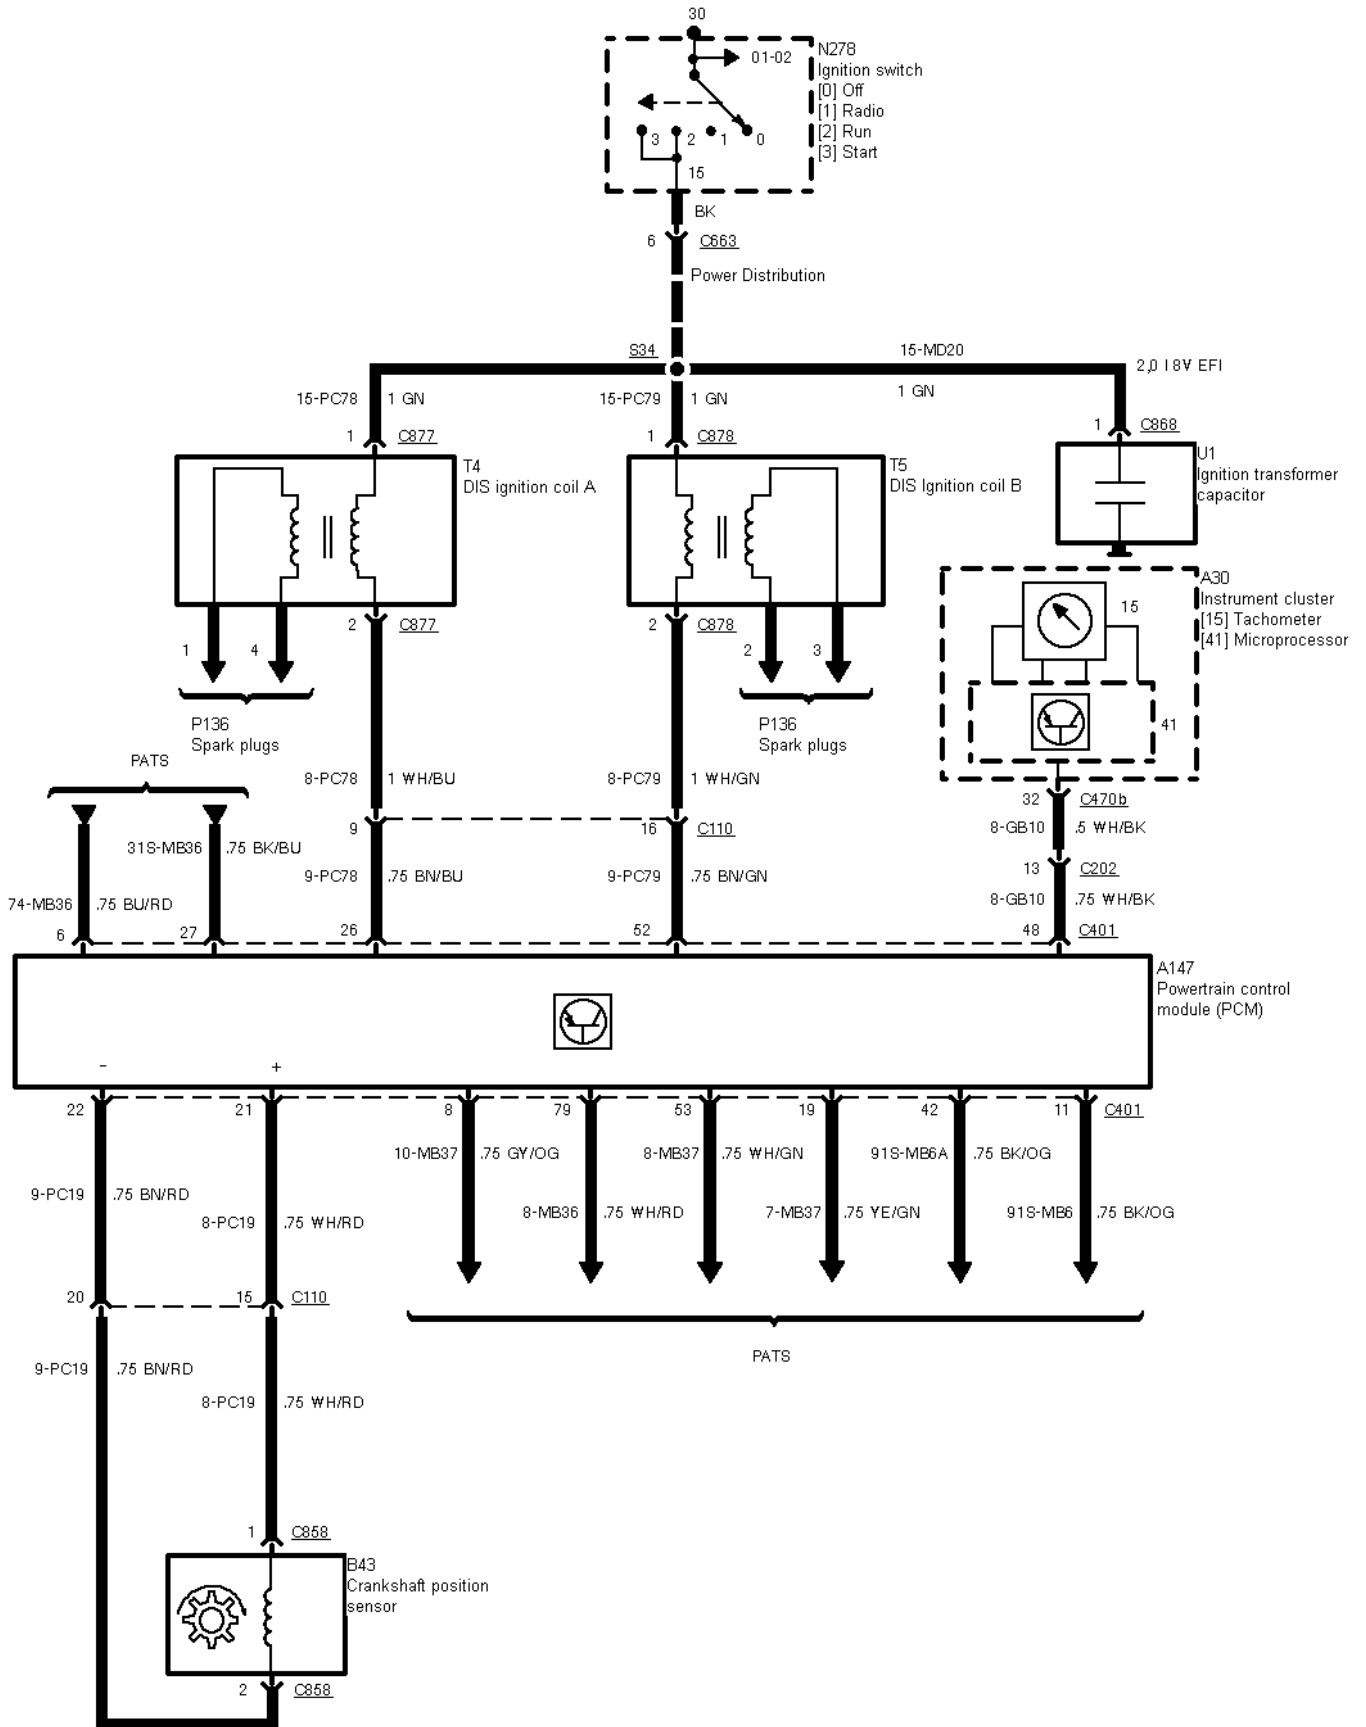


29-02-003 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission) , Sensors

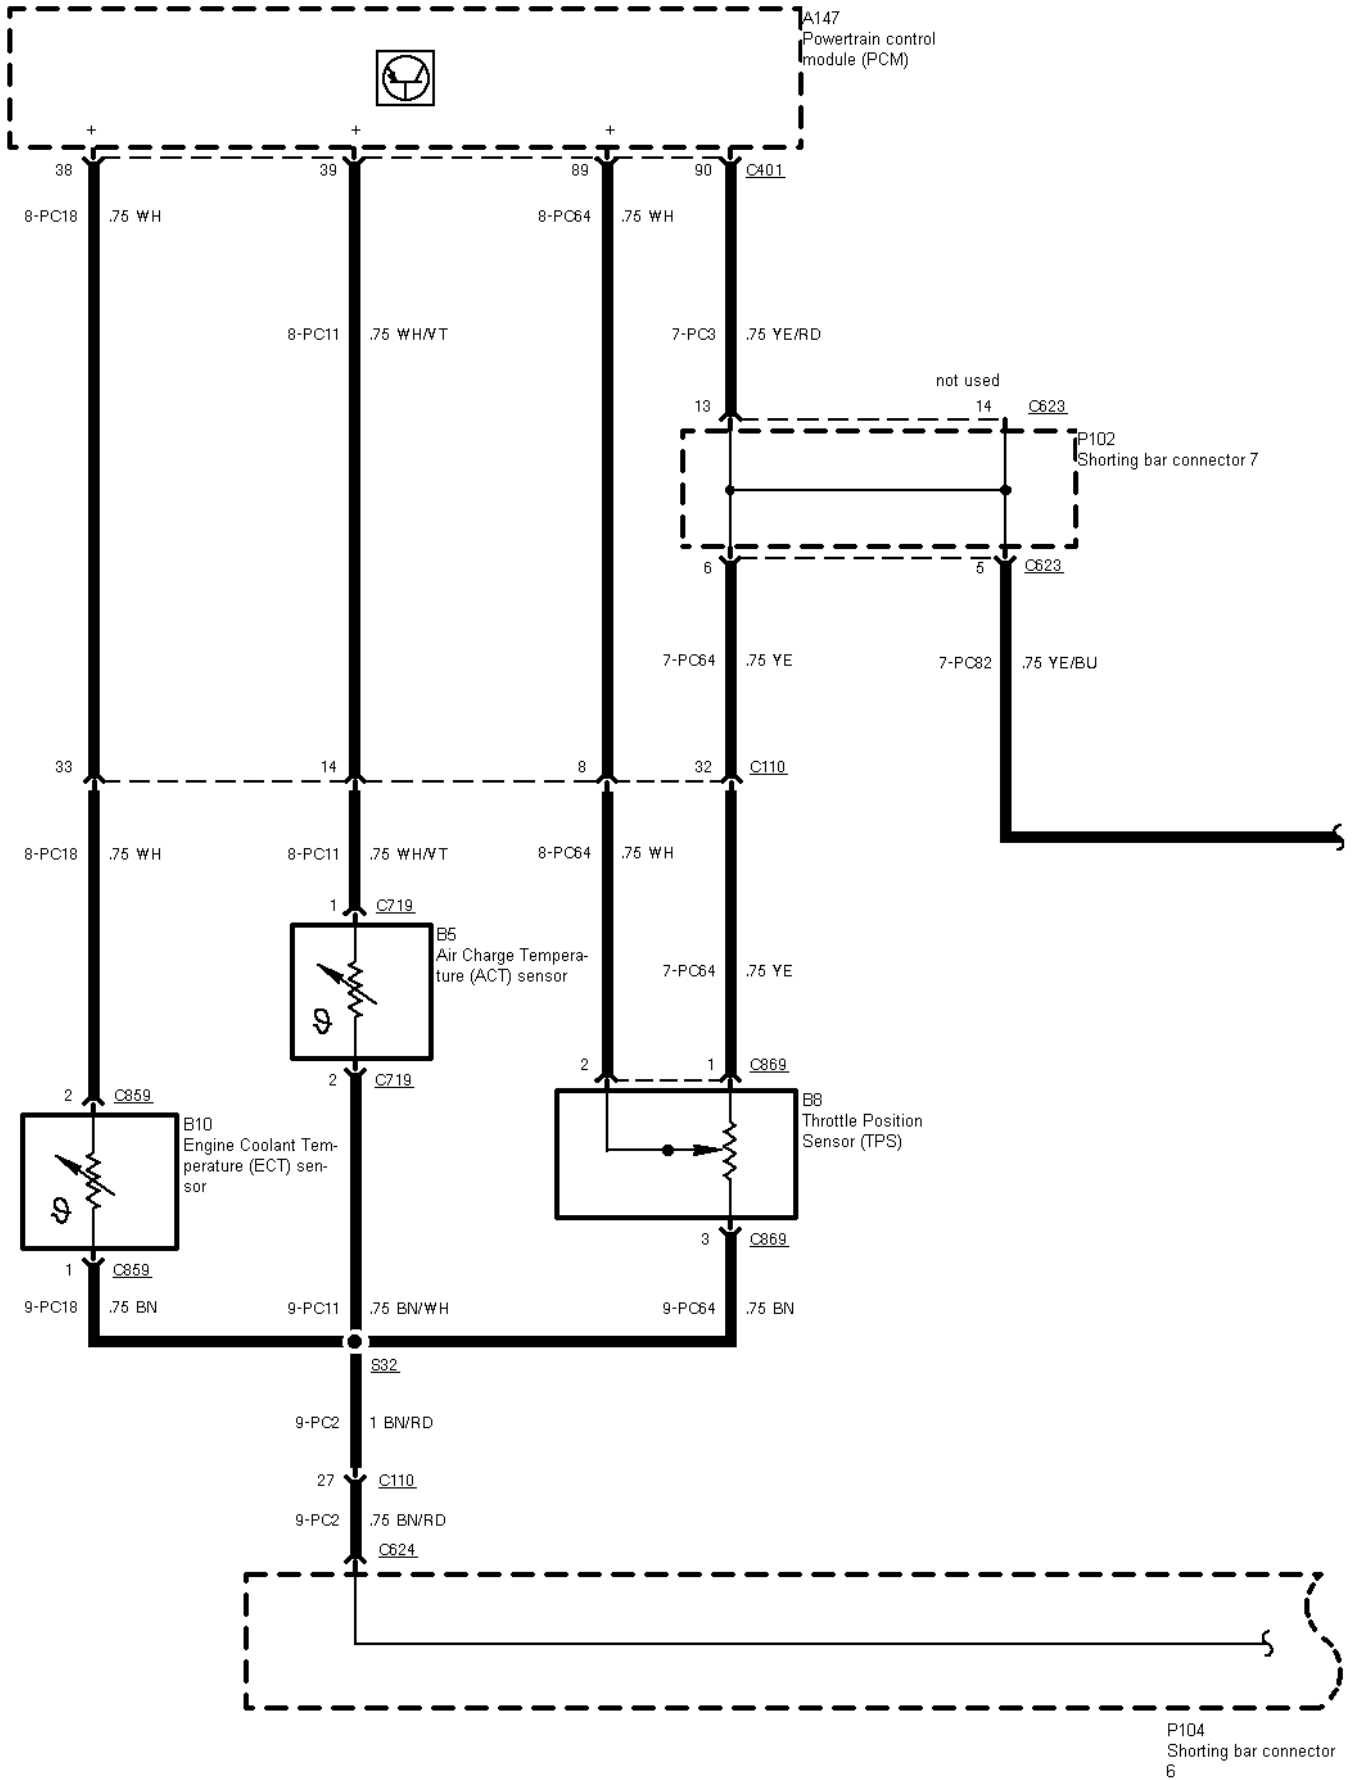


29-02-004 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission)

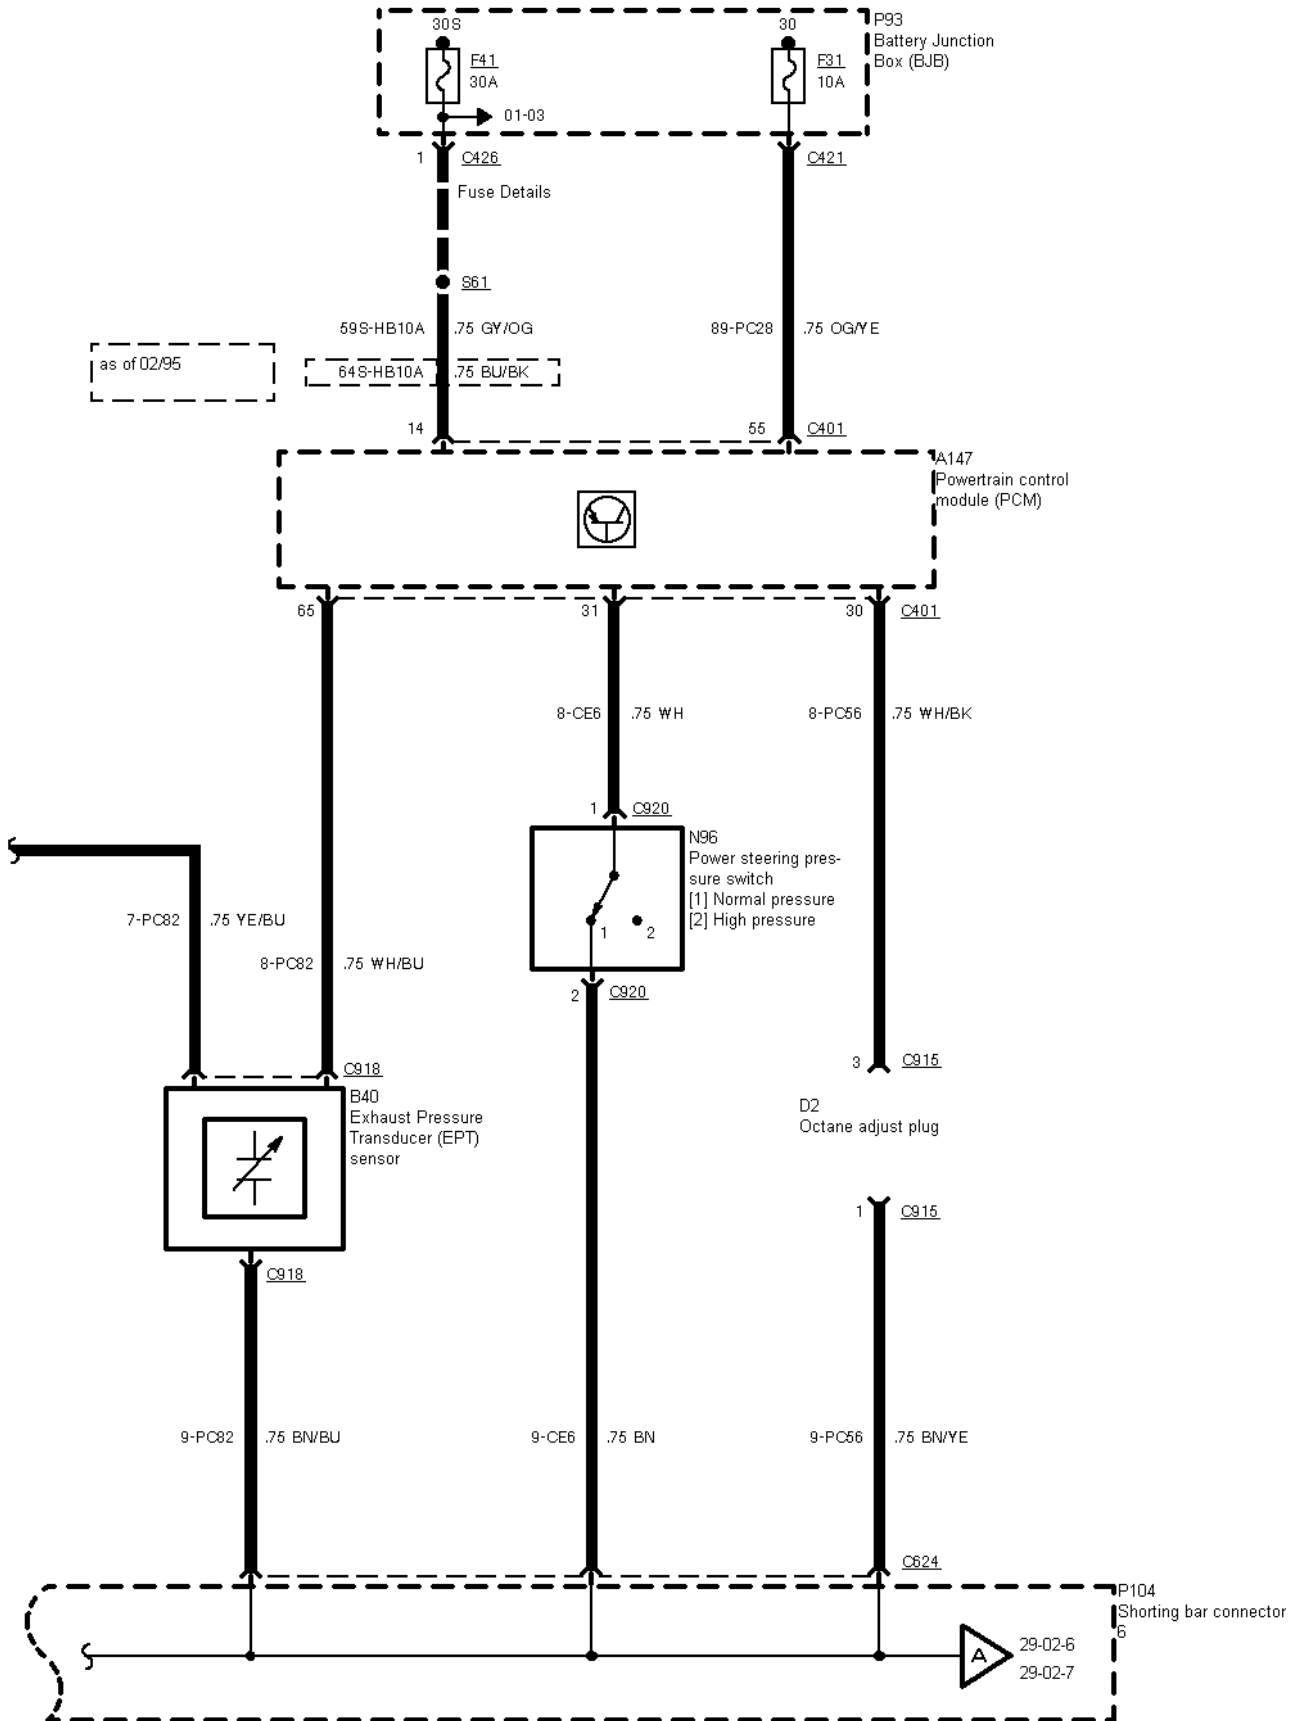


29-02-005 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission) , Fuel injection

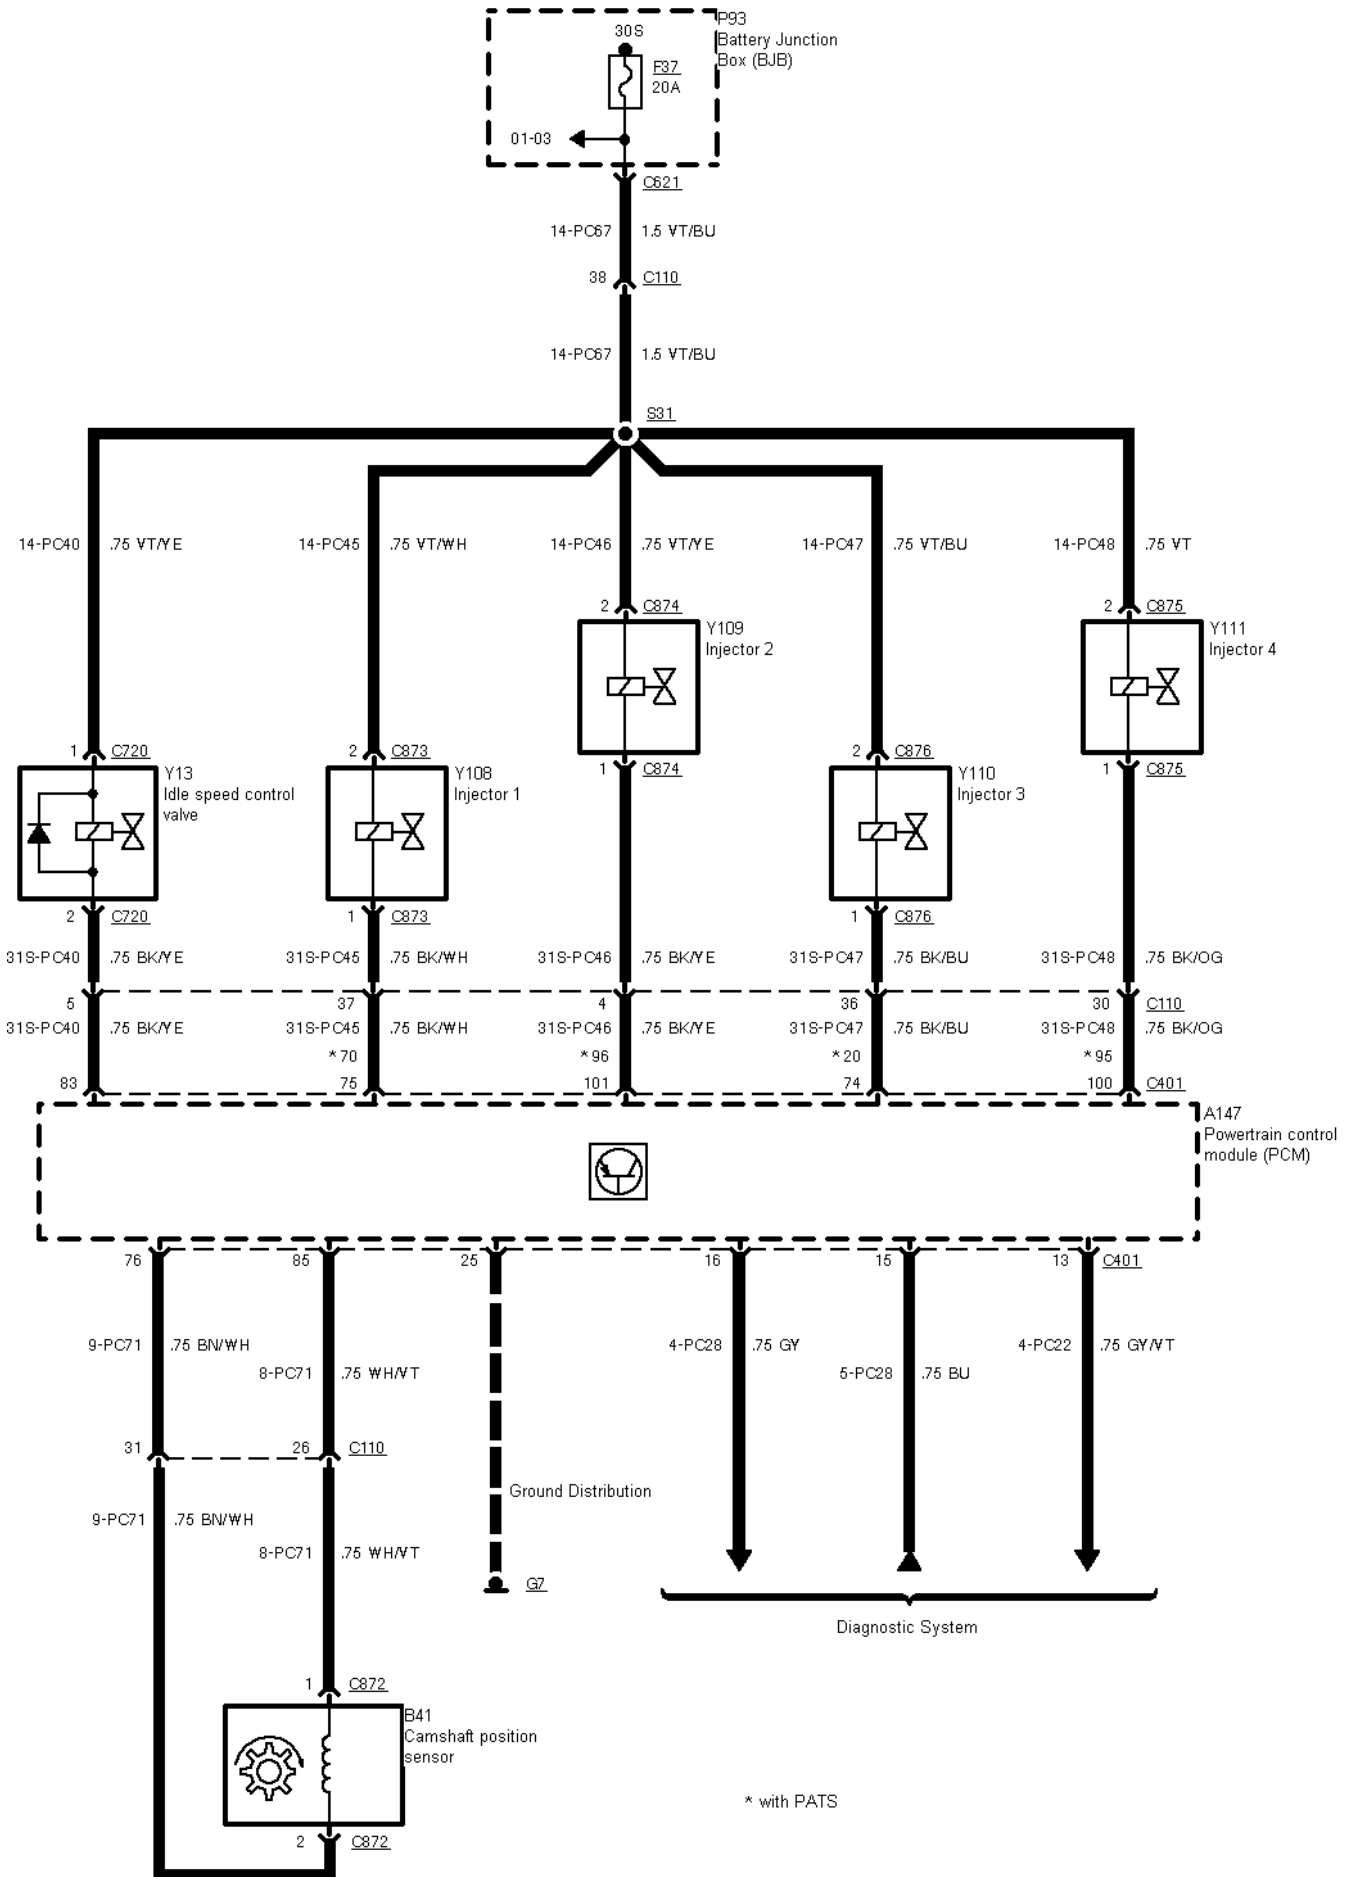


**29-02-006 , Engine Control 2,0 I 8V/16V EFI (Manual Transmission) , 2,0 I 8V EFI from 02/95 to 03/96
and as of 04/97**

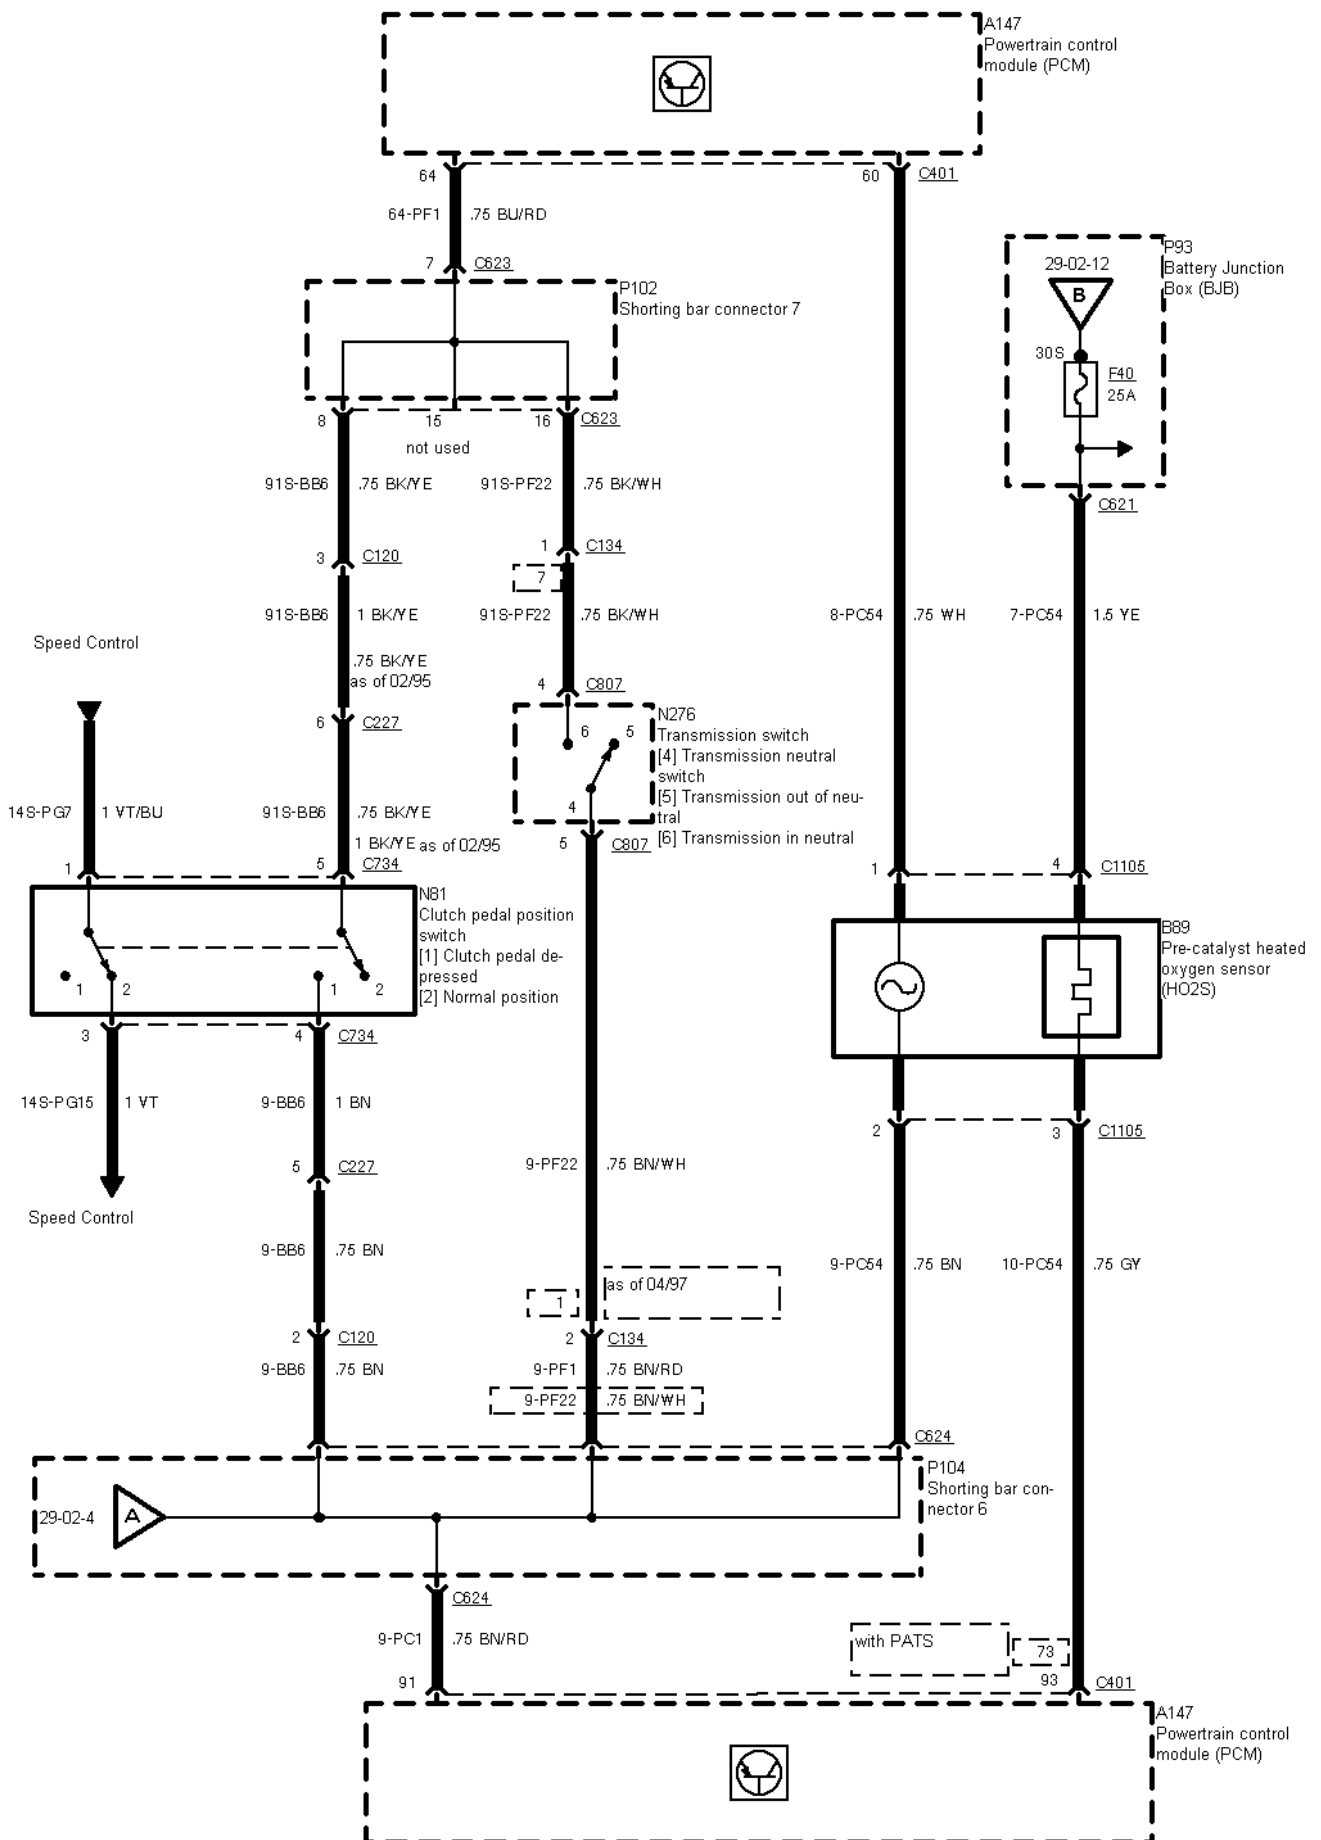



29-02-007 , Engine Control 2,0 | 8V/16V EFI (Manual Transmission) , 2,0 | 16V EFI, 2,0 | 8V EFI before 02/95, 2,0 | 8V EFI from 03/96 to 04/97

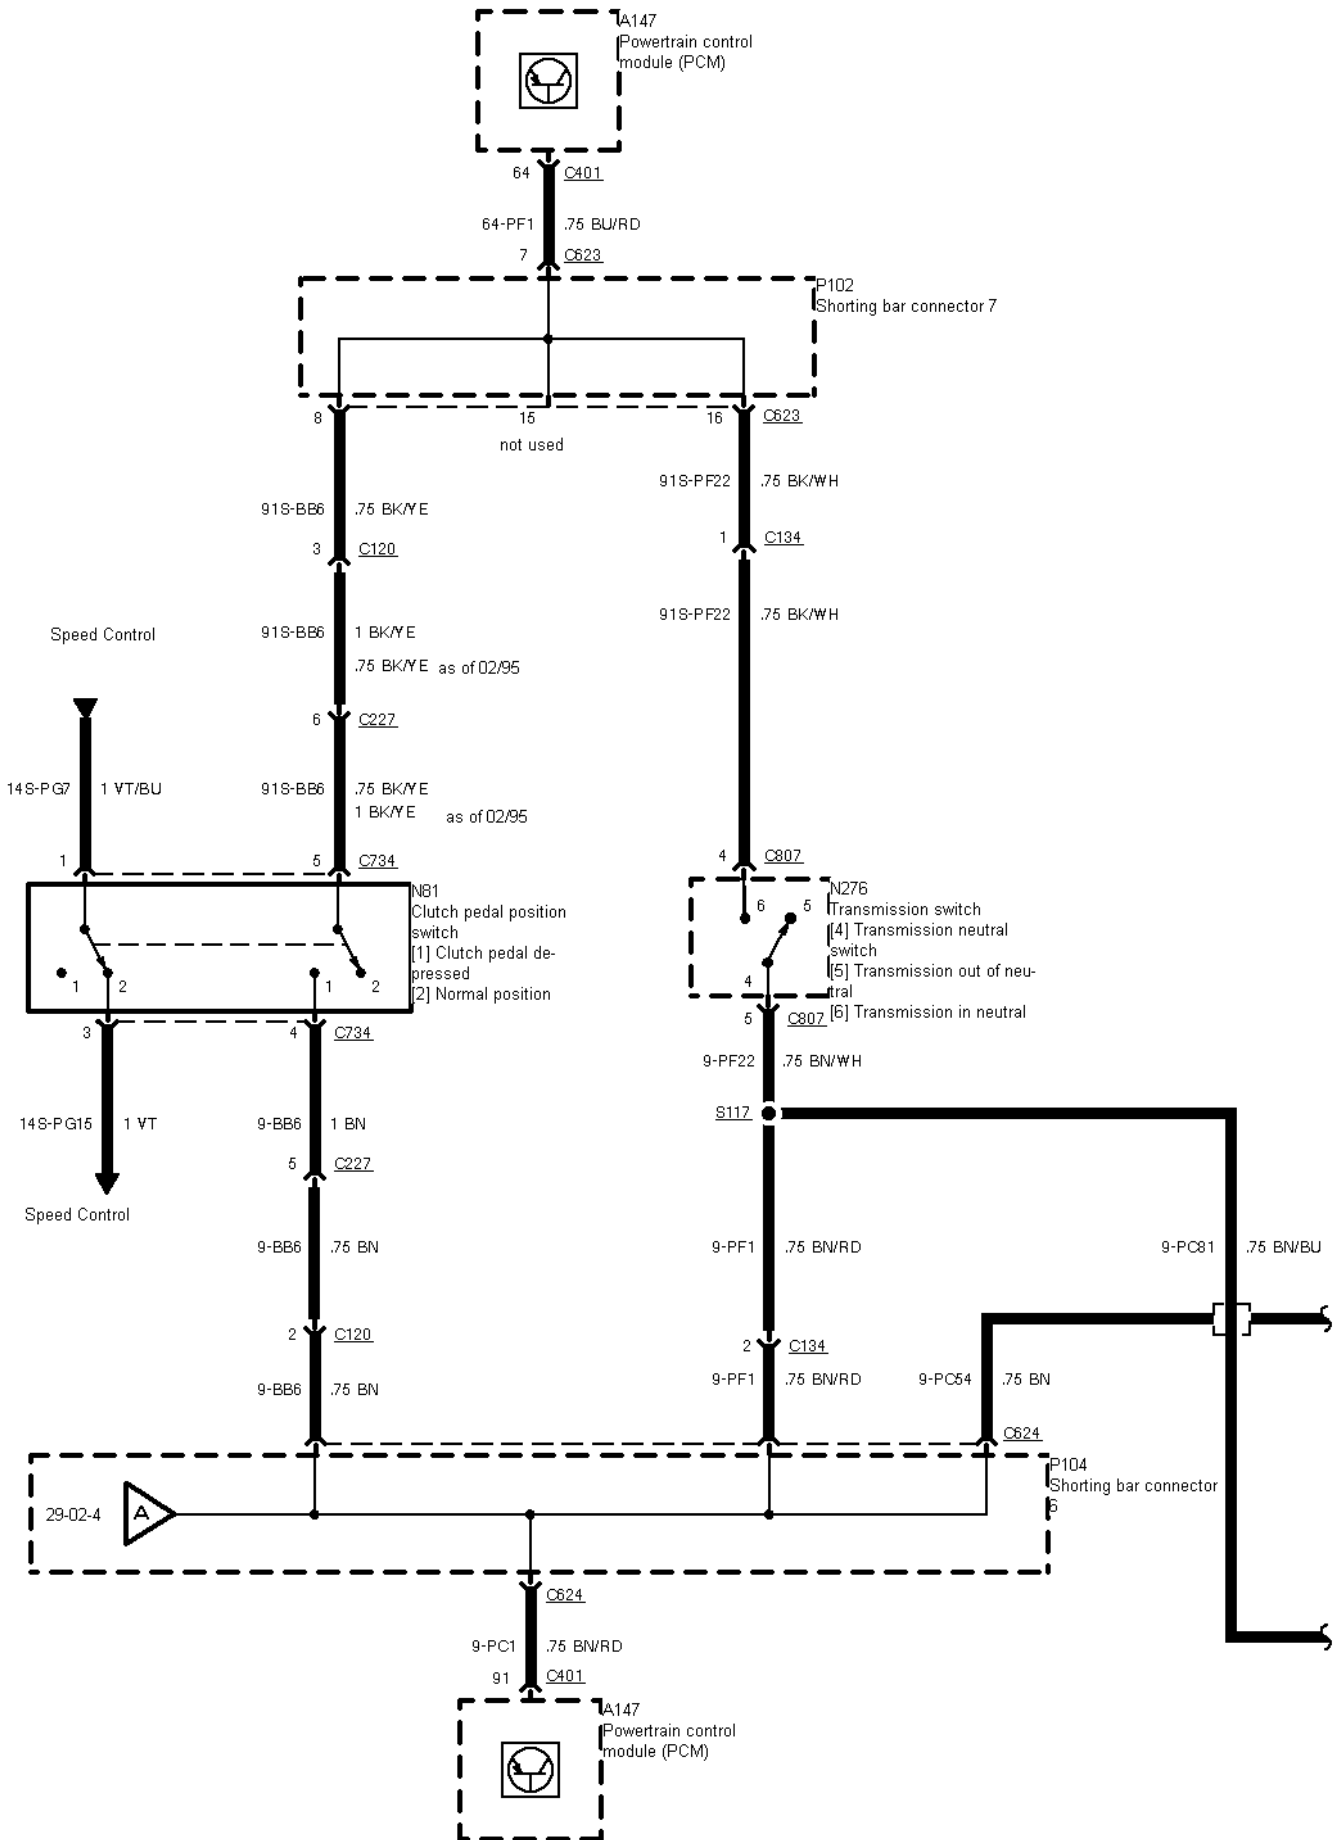



29-02-008 , Engine Control 2,0 | 8V/16V EFI (Manual Transmission) , 2,0 | 16V EFI, 2,0 | 8V EFI before 02/95, 2,0 | 8V EFI from 03/96 to 04/97 Sensors

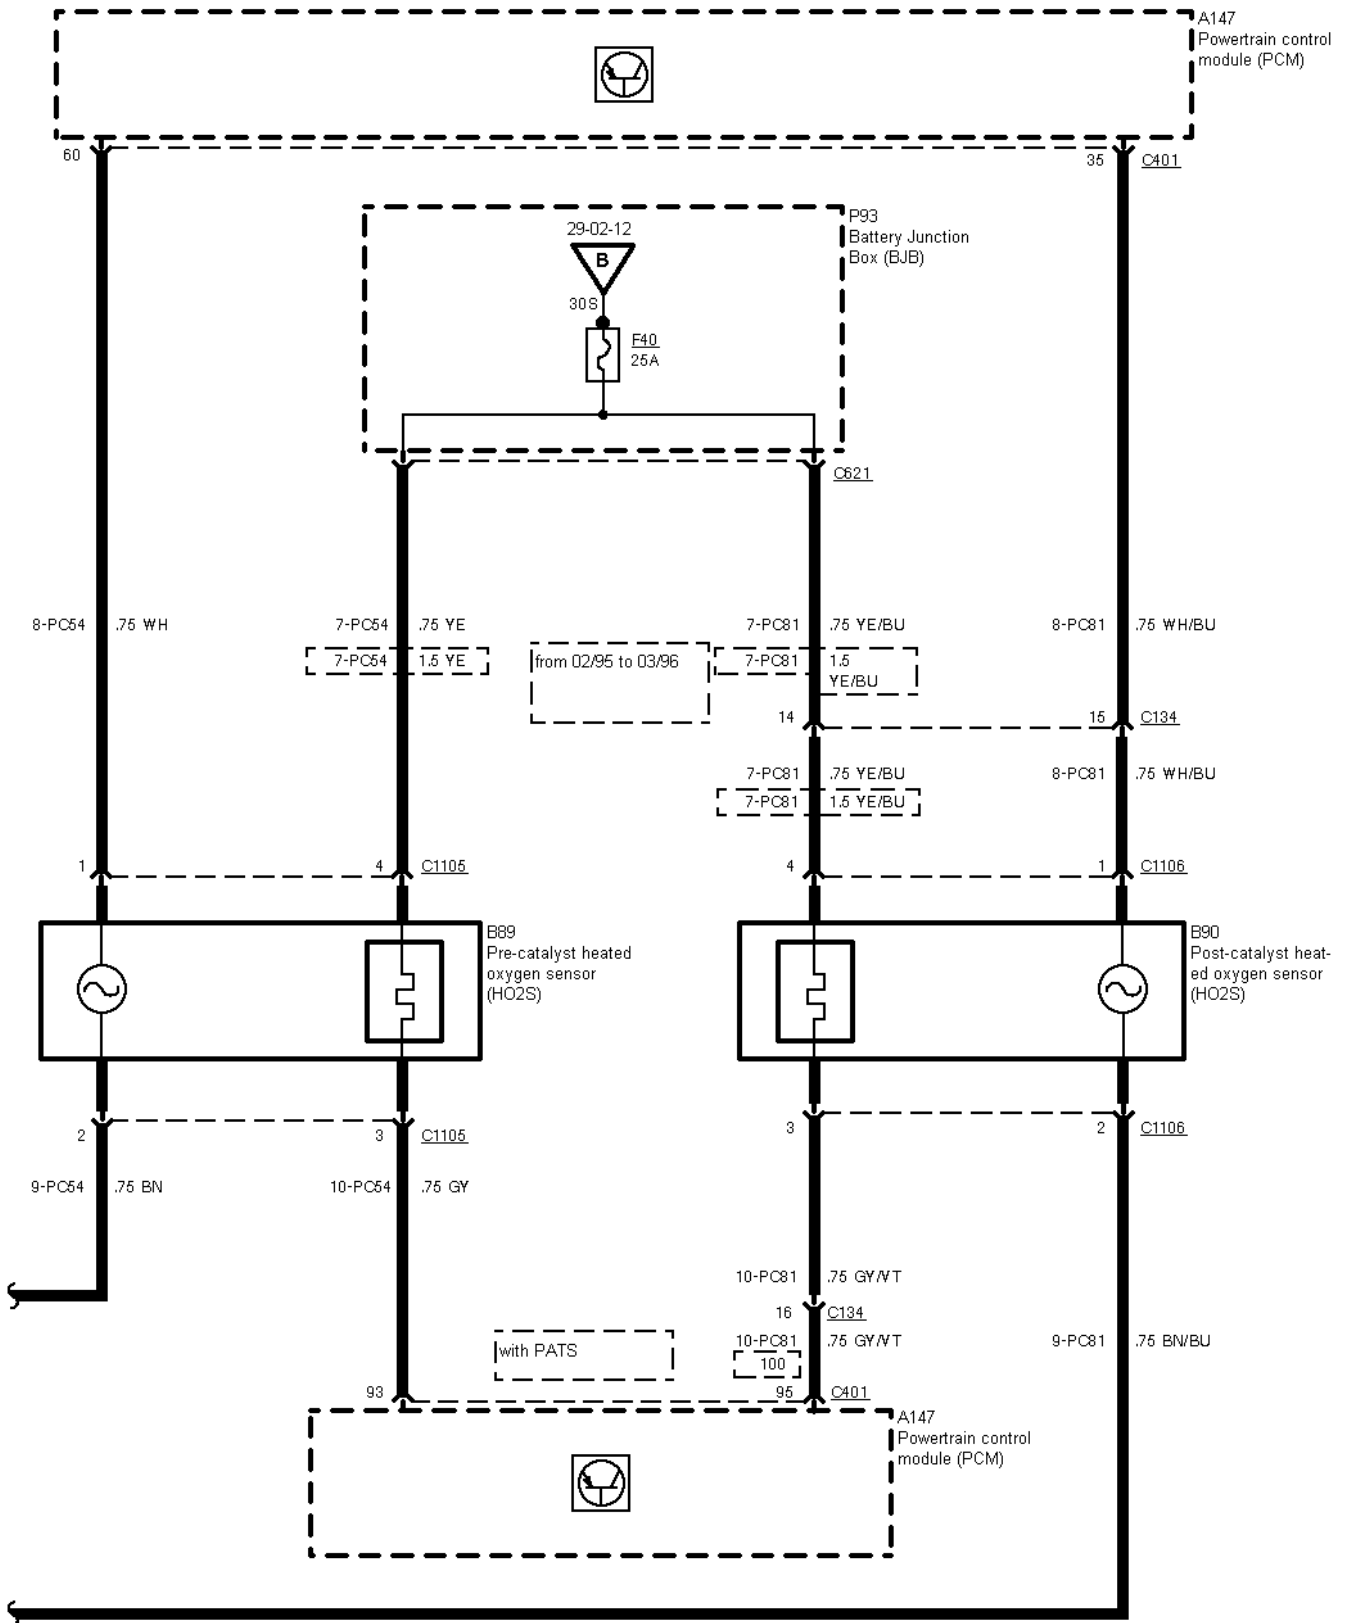


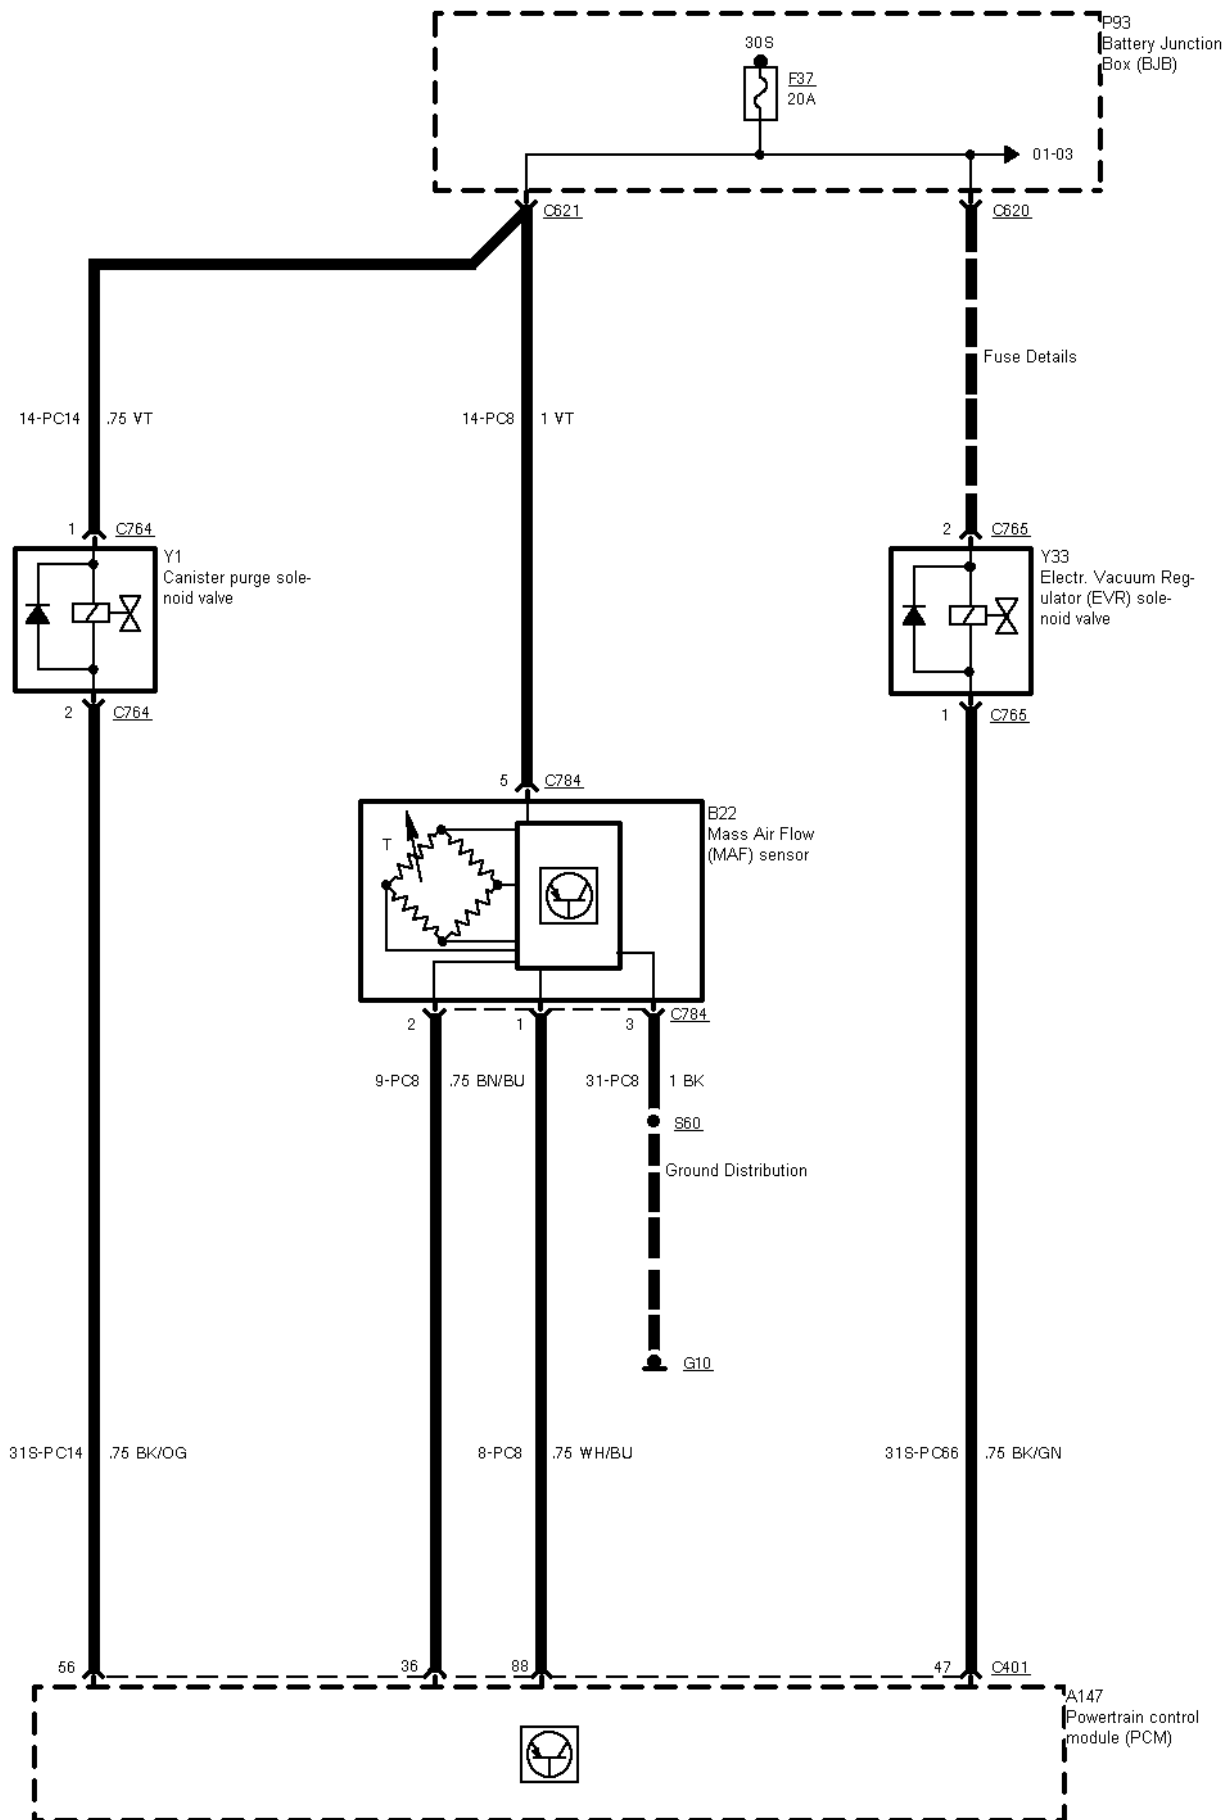


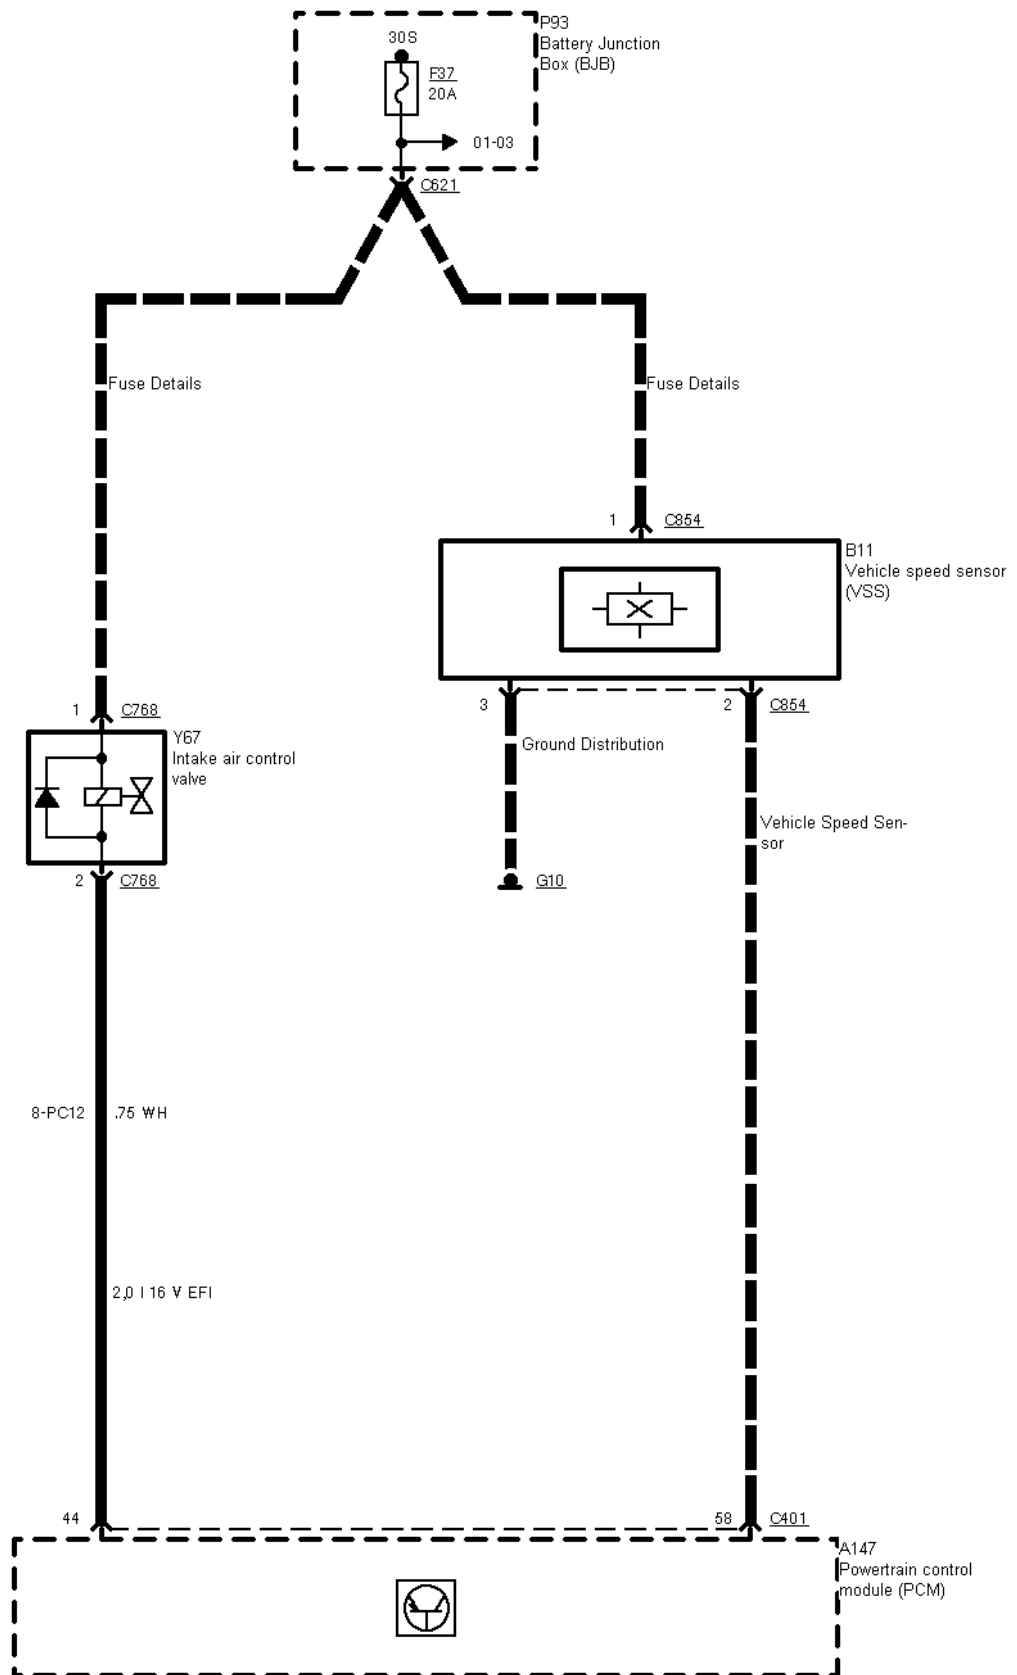


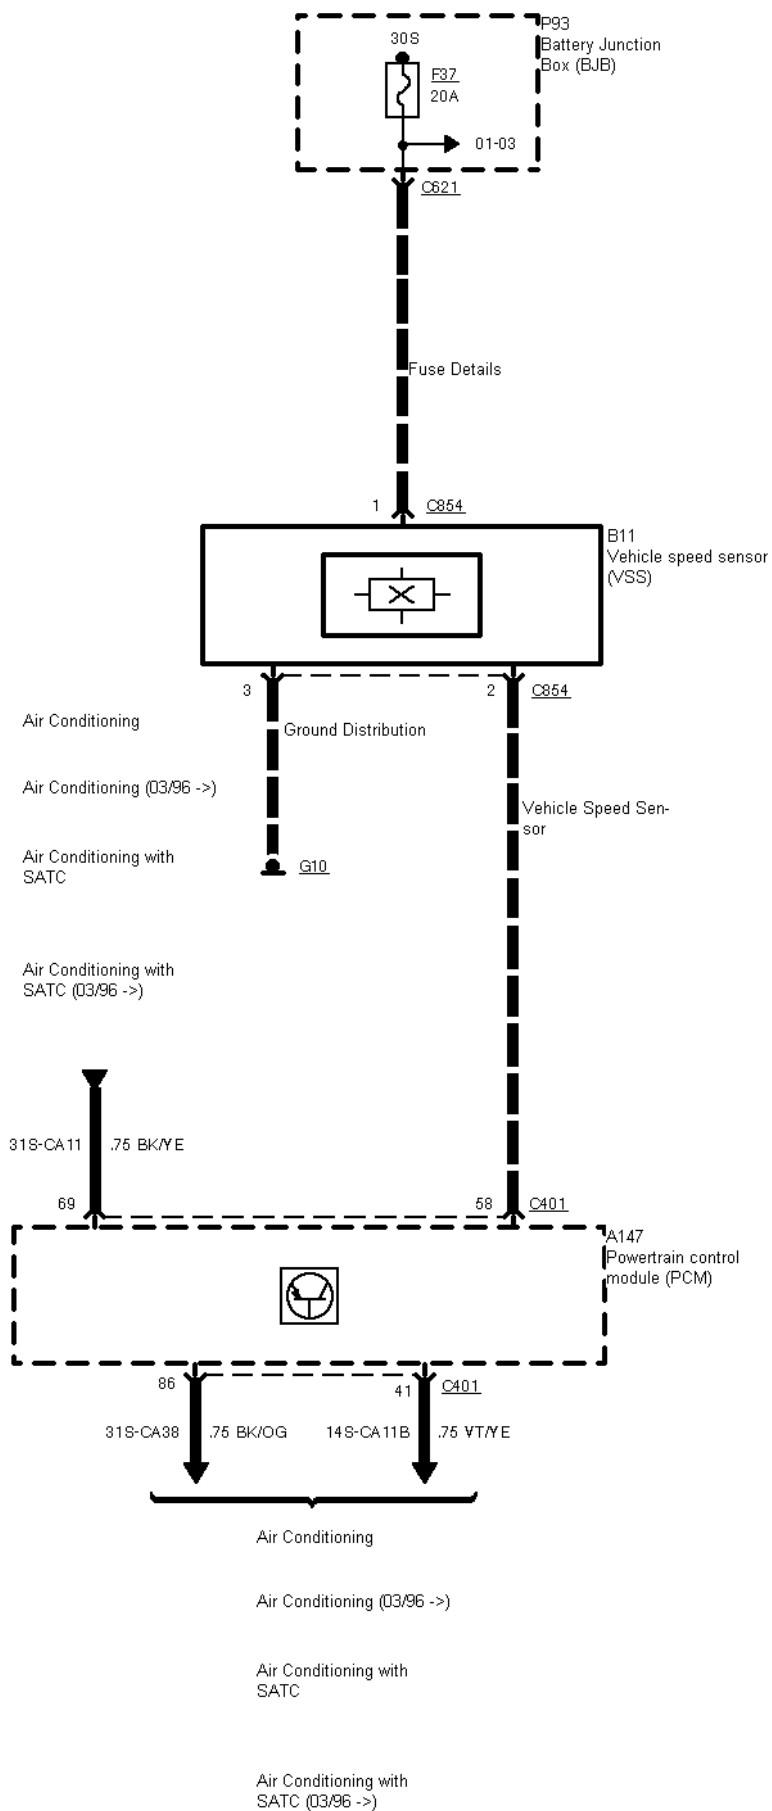

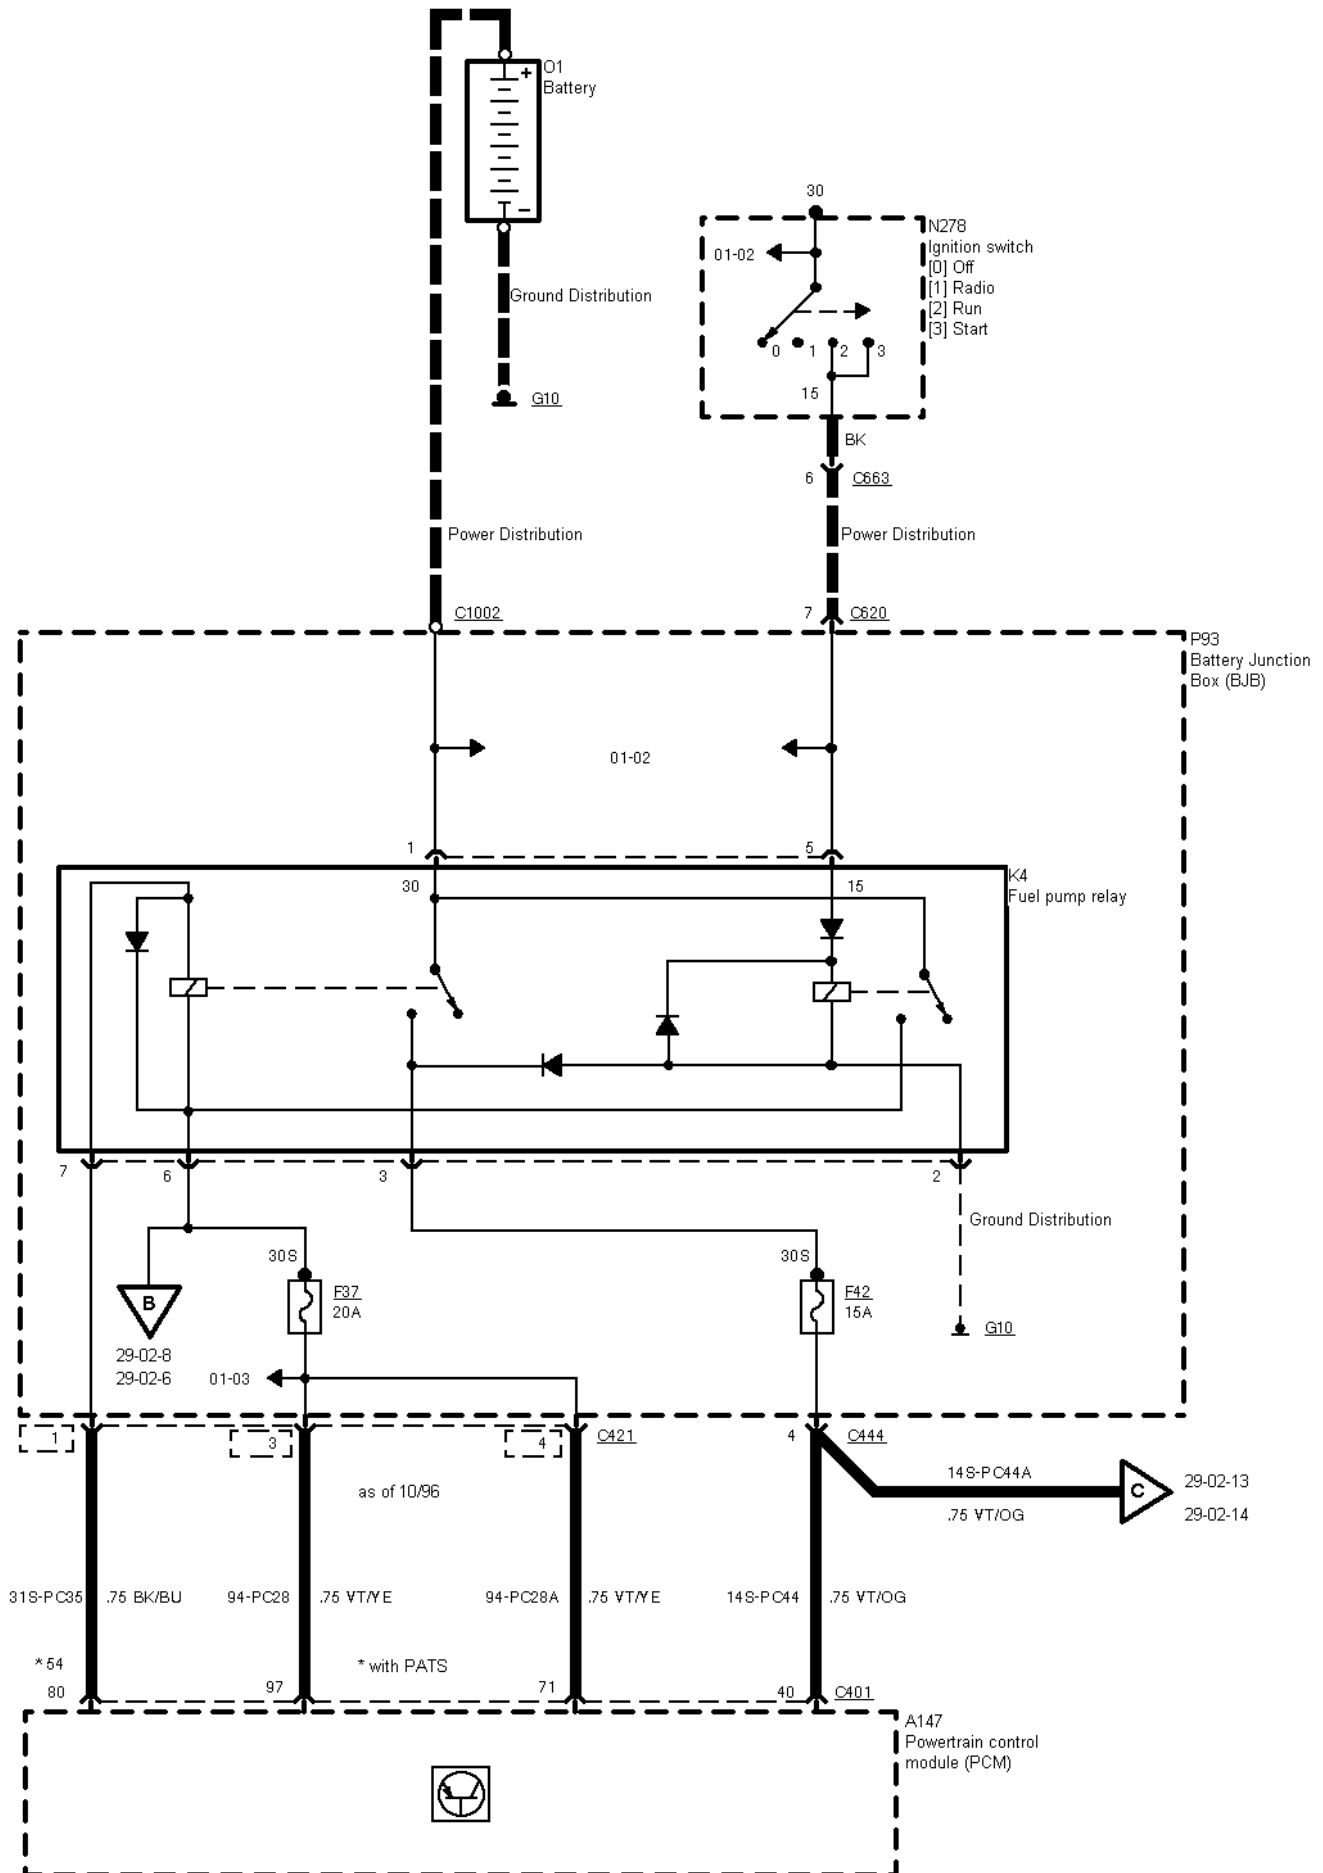

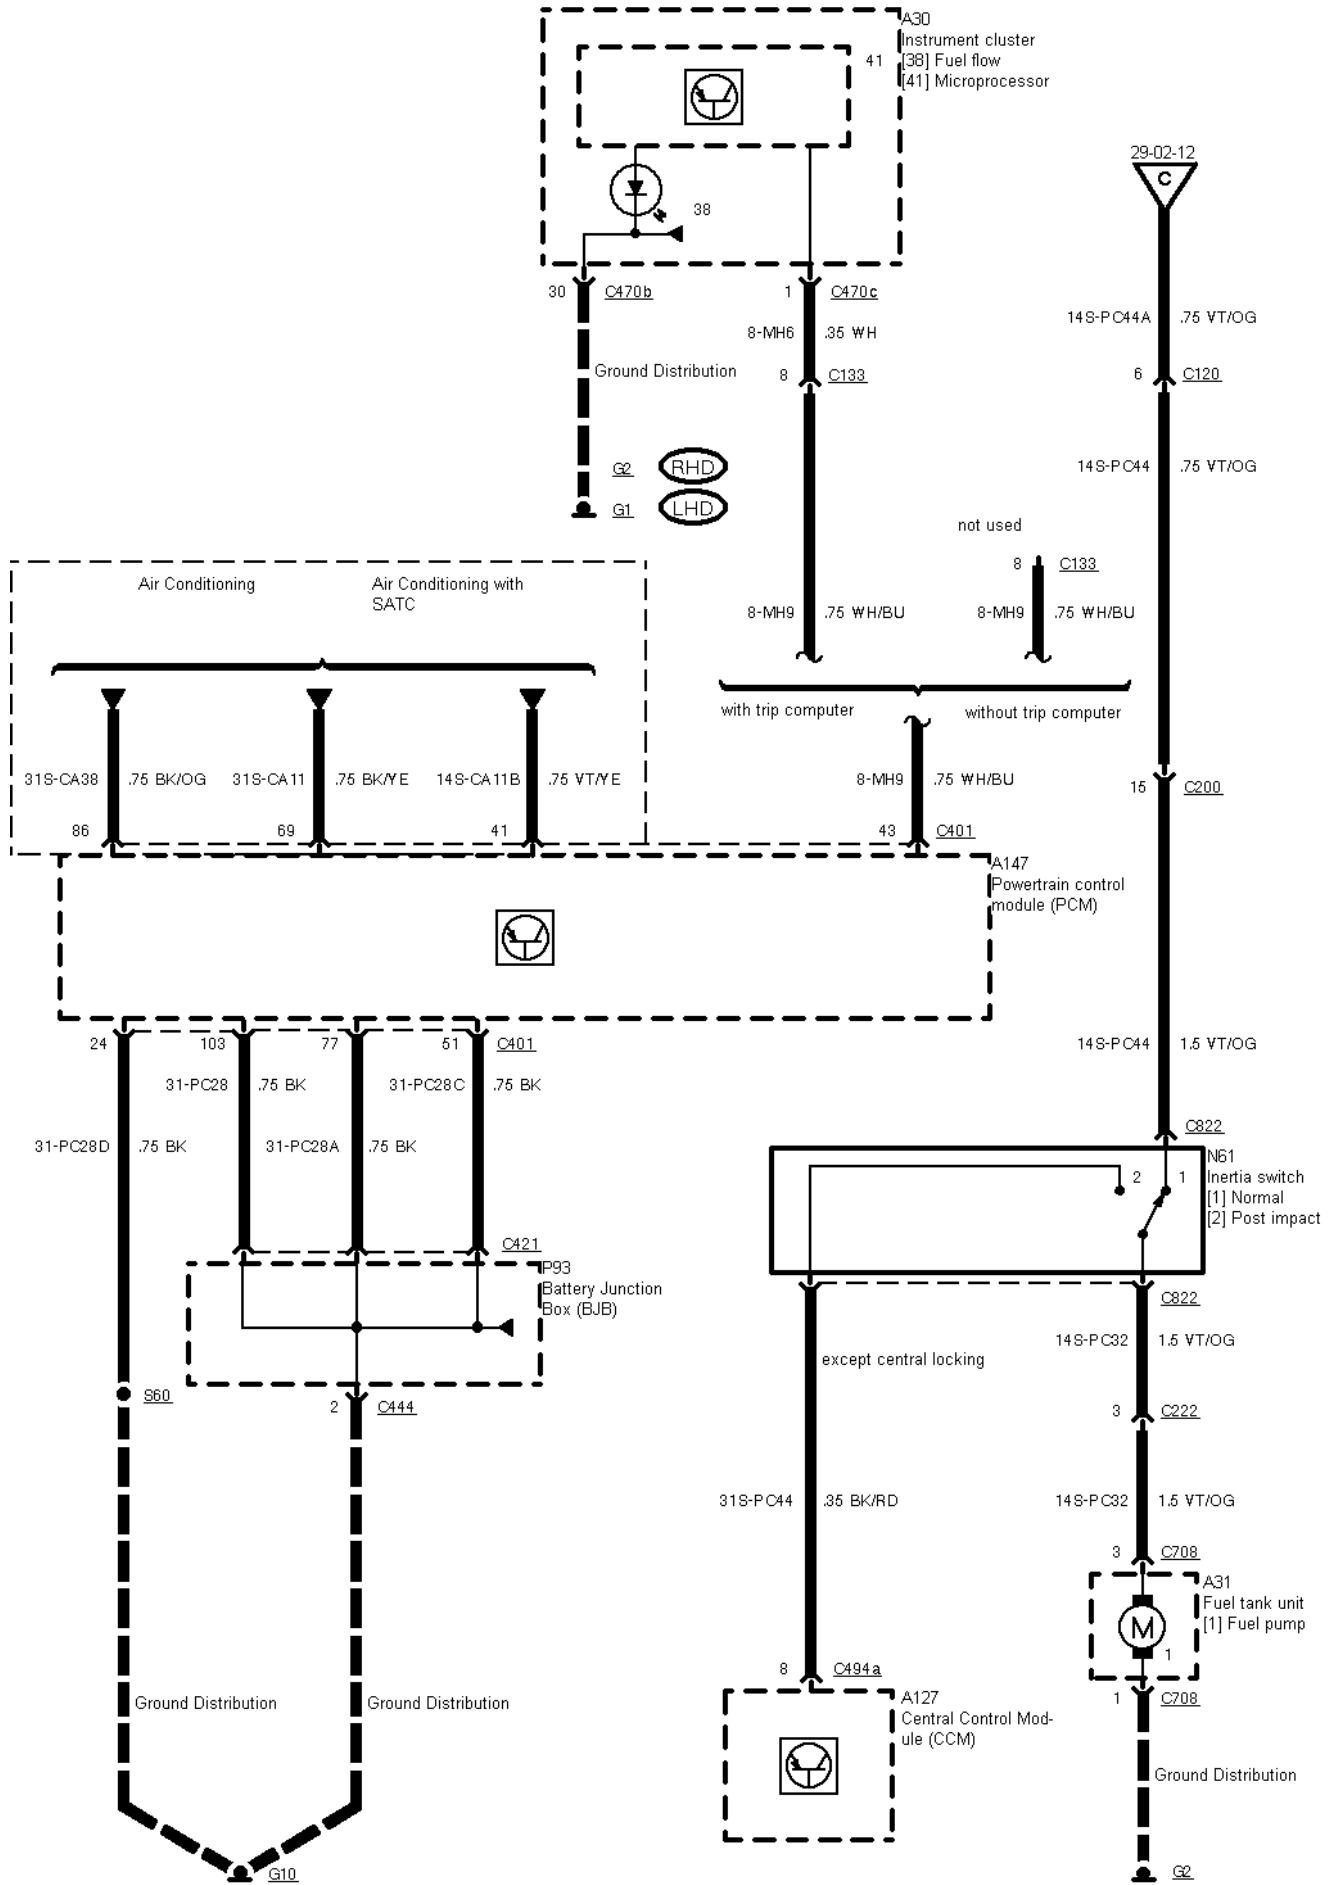

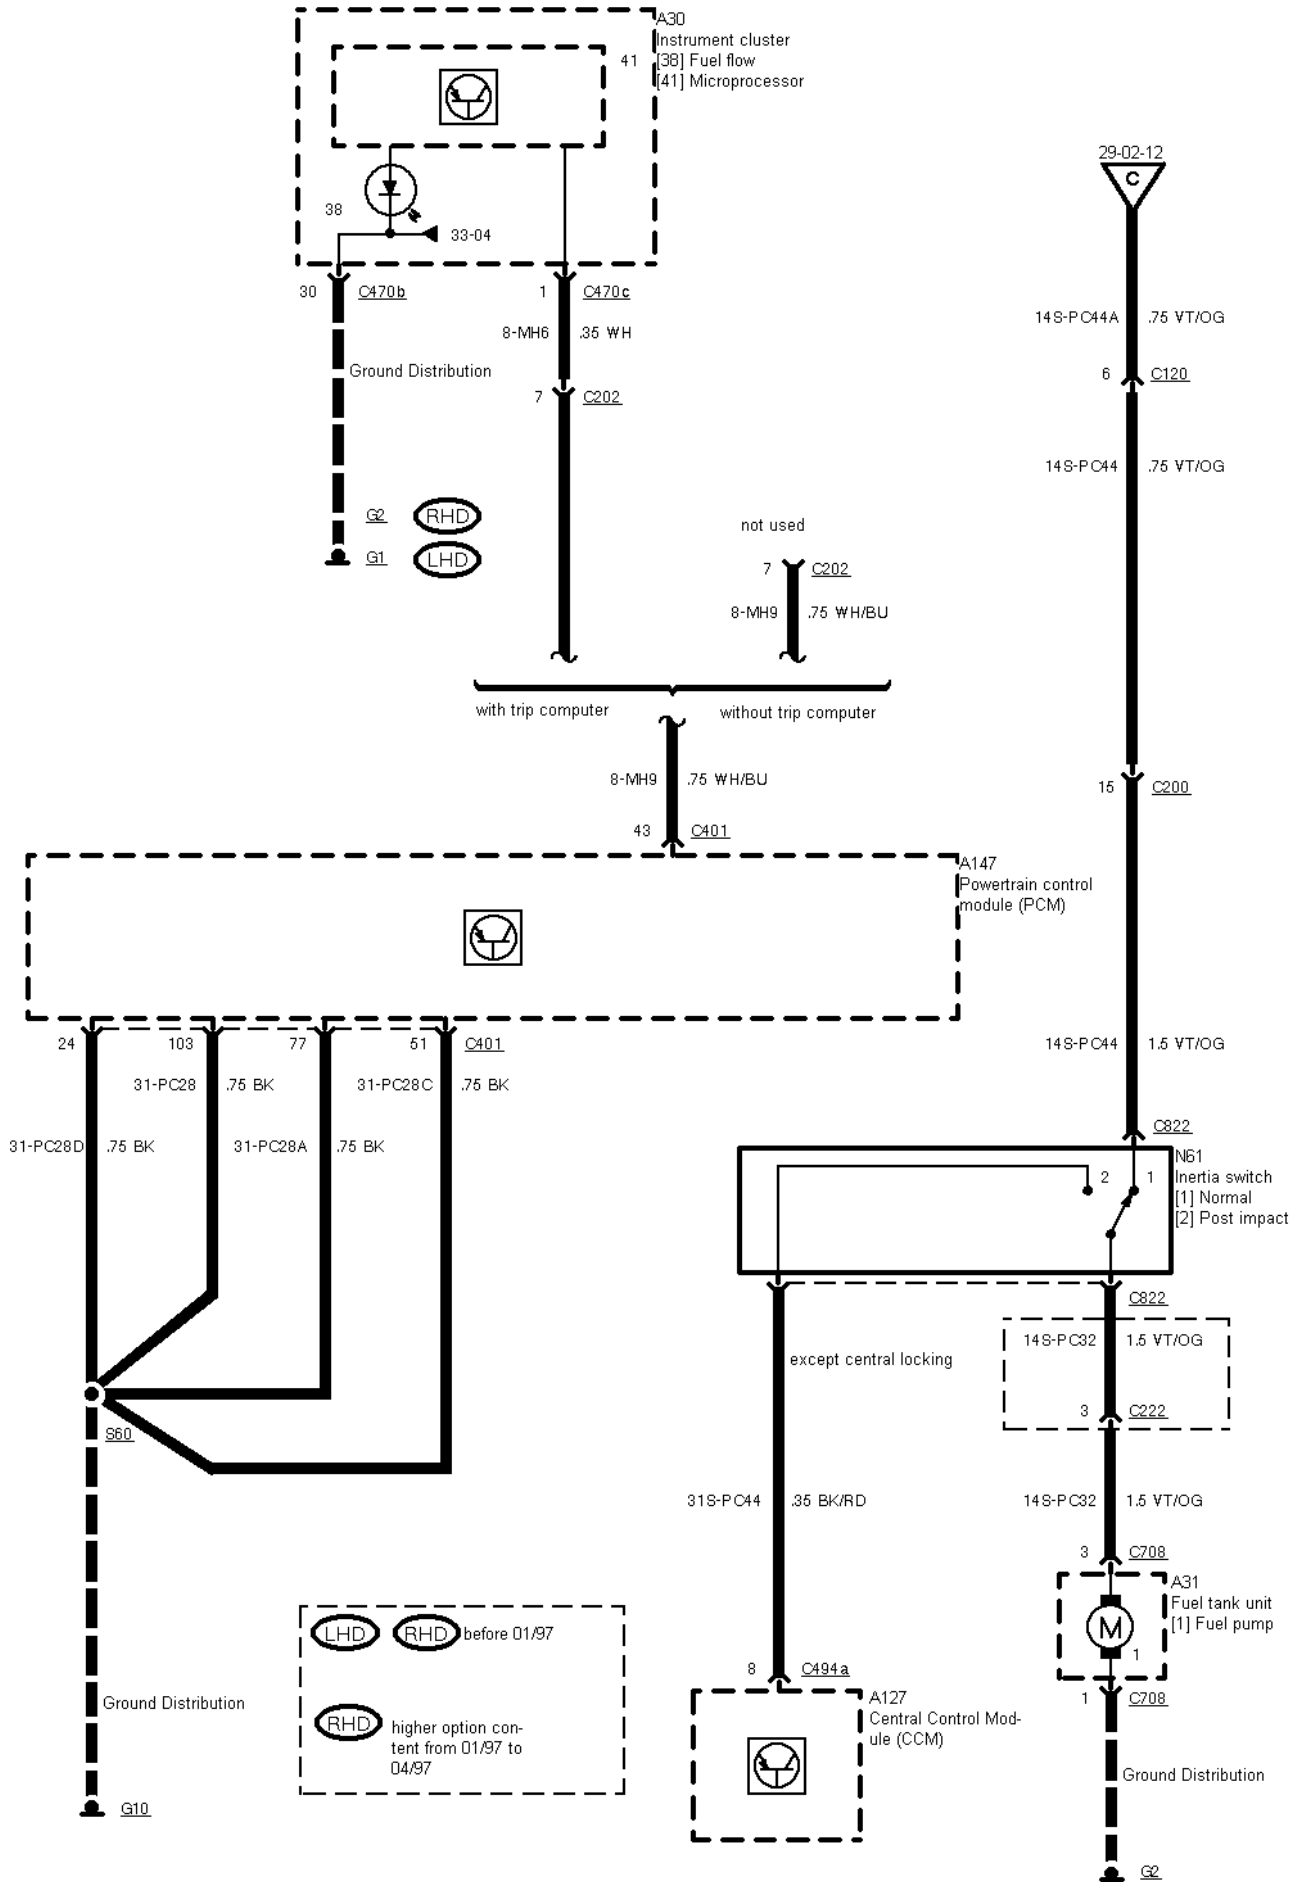

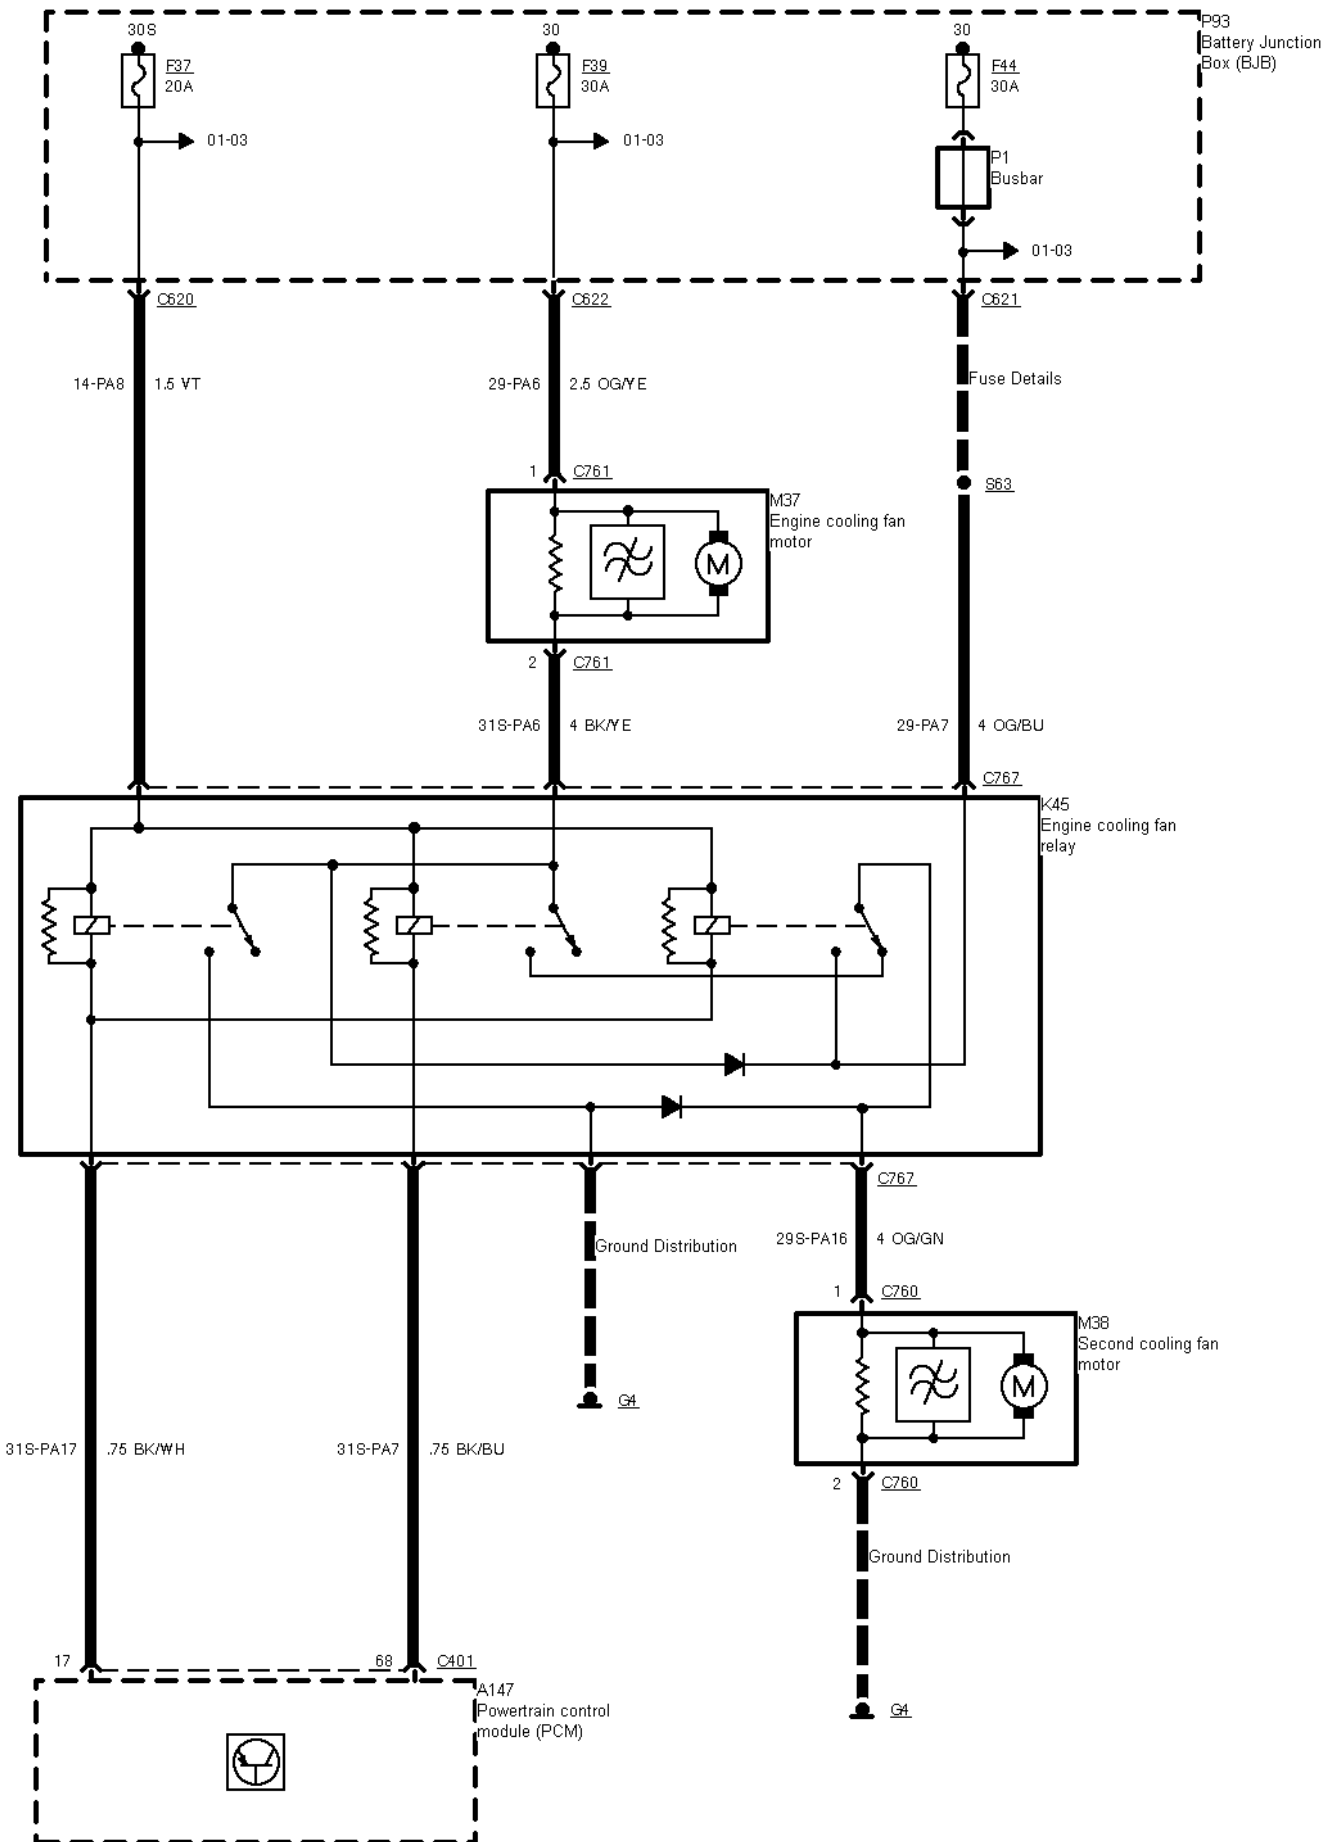

2 Circuit Description

